



## Manual Firmware Update Instructions for DroboShare


1. Download the zipped DroboShare firmware file (Windows) or Disk Image (Mac) and save it to a folder not located on your DroboShare.
2. Extract the firmware file and save it to a folder not located on your DroboShare. After this step the file should end in the file extension of .tds (e.g., v1.1.2.tds). The file name will be different depending on the version of firmware you are installing.
3. Open Drobo Dashboard and click Advanced Controls.

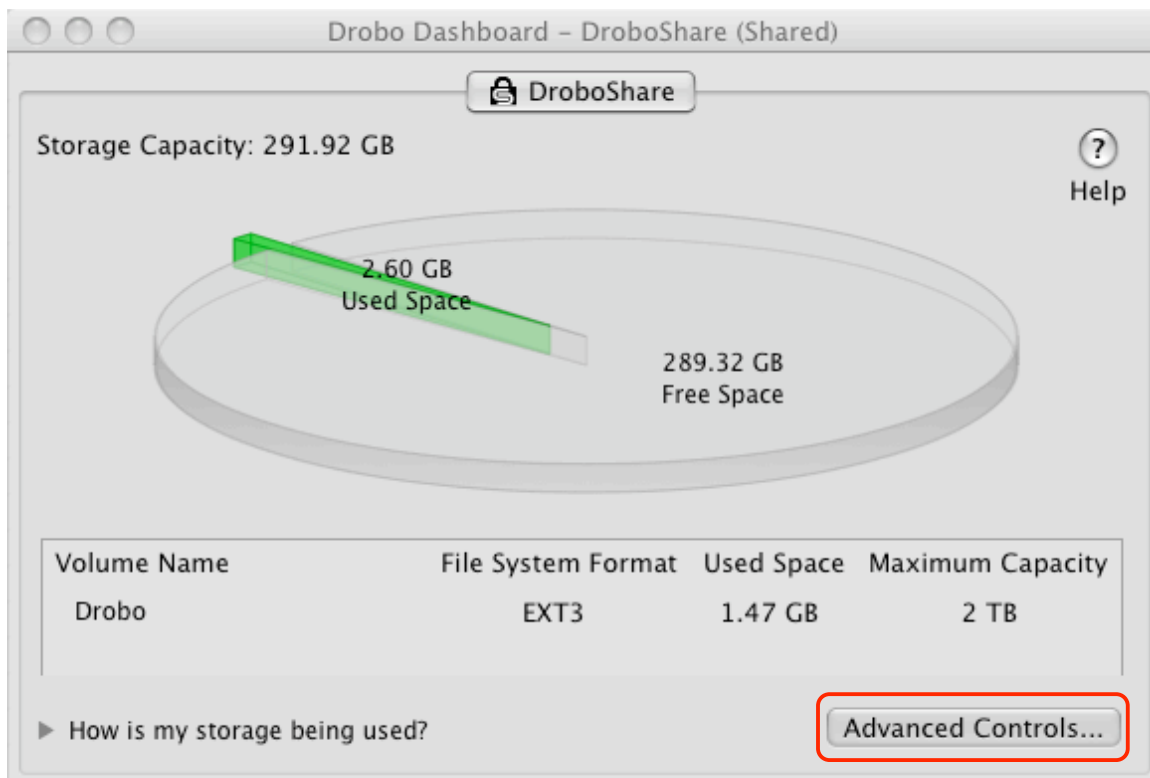


4. In the Advanced Controls window, click the Tools tab. **Next, hold down the Control key and Alt (Windows) or Option/Alt (Mac) on your keyboard and at the same time click Check for Updates.**

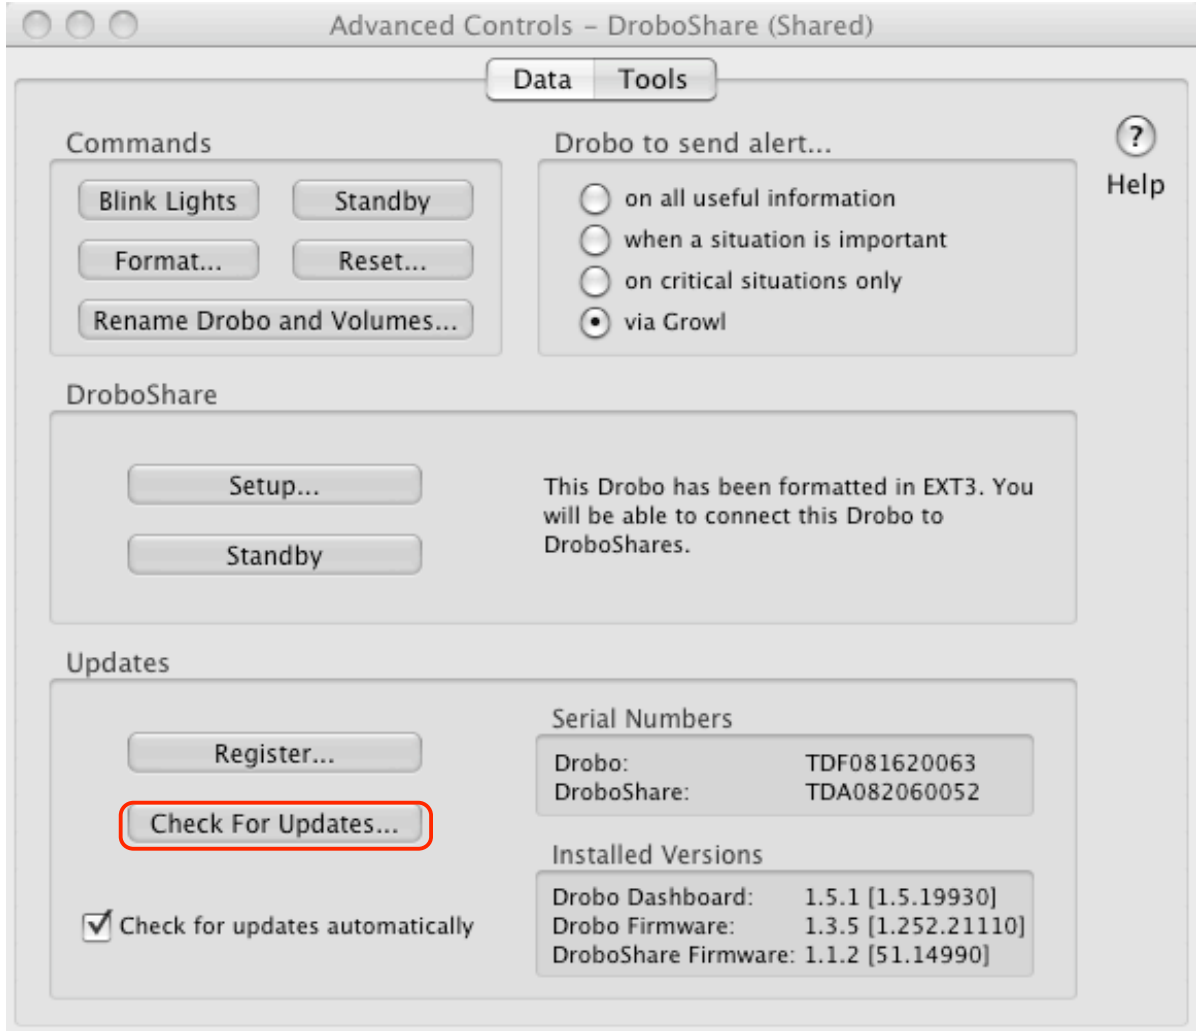

5. You will be presented with a dialog that allows you to select the DroboShare firmware file. Navigate to the location where you saved the DroboShare firmware file, select the .tds, and click Open.

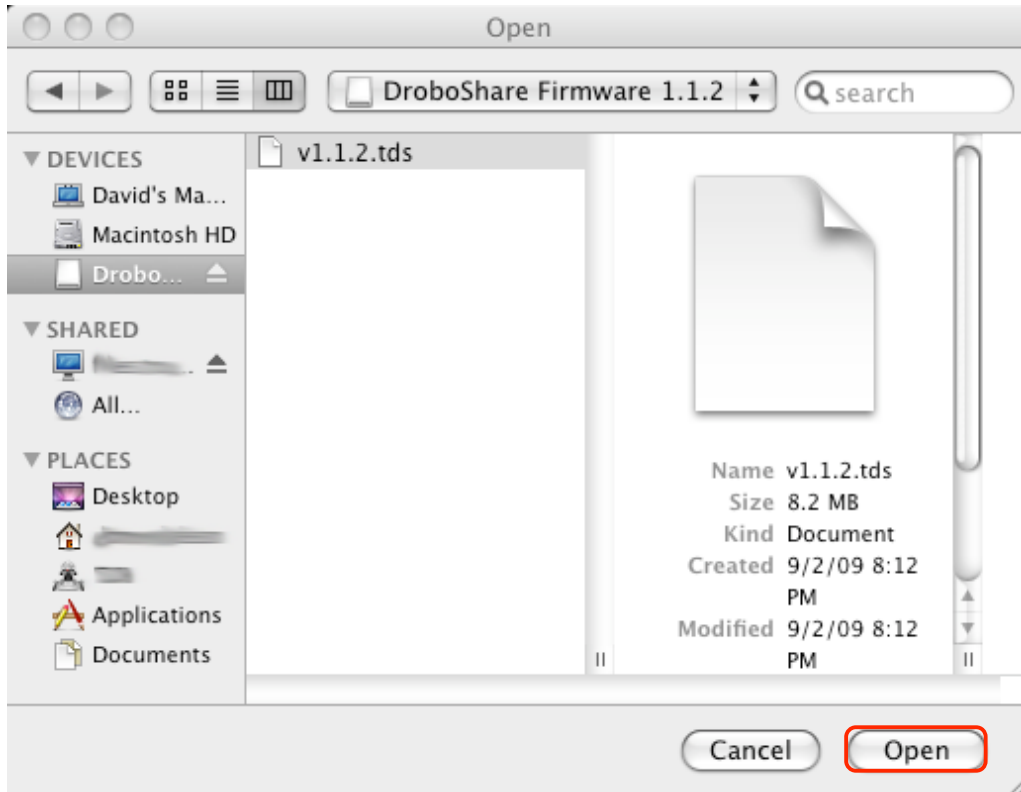


6. Make sure that you are not actively transferring data to or from your DroboShare and then click OK.

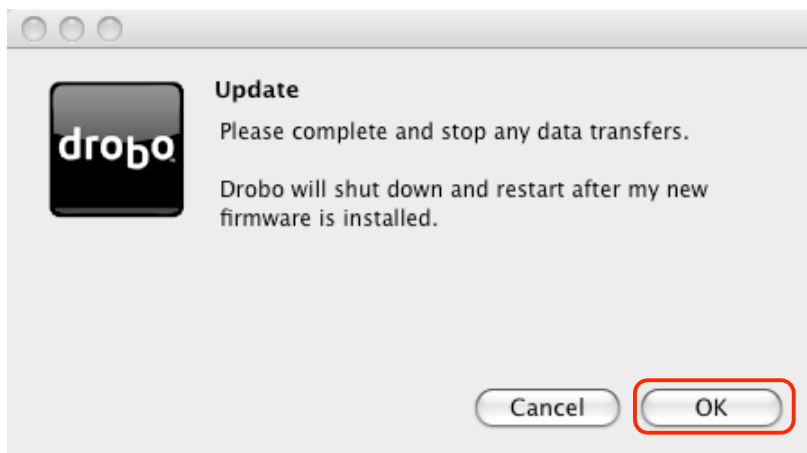

Copyright 2009 Data Robotics, Inc. Data Robotics, DroboPro, Drobo, DroboShare and BeyondRAID are trademarks of Data Robotics, Inc., which may be registered in some jurisdictions. All other trademarks used are owned by their respective owners. All rights reserved. Specifications subject to change without notice.

7. The following dialog will appear during the update. The update process will take a few minutes.

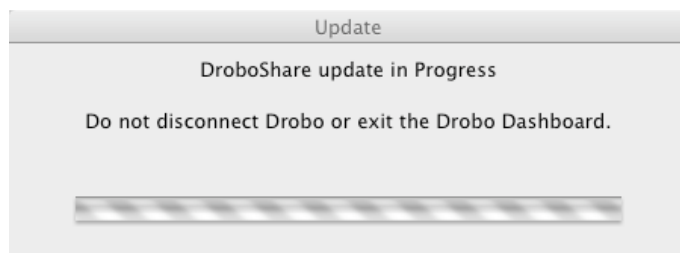

8. After the update process is complete, a dialog will appear asking you to reboot your DroboShare. Click OK.



9. To verify that your DroboShare is running the new firmware, go back to the Tools tab in Advanced Controls. The version of DroboShare firmware is displayed in the bottom right corner.

